



# Displacement resin infusion


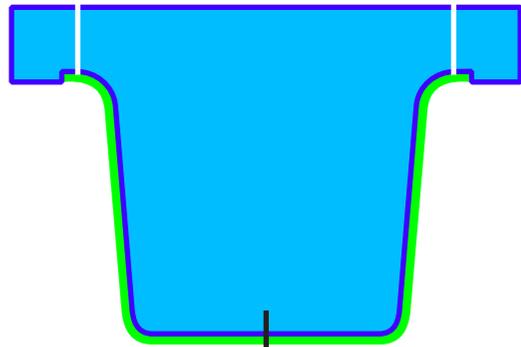


1) gelcoat the male mould and wrap it in a glass material with integral infusion medium like Saercore, or Rovicore

2) pour a known quantity of mixed resin into the bottom of the female mould

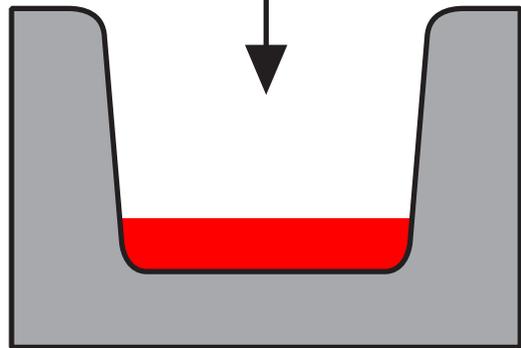

3) push the moulds together and apply a weight

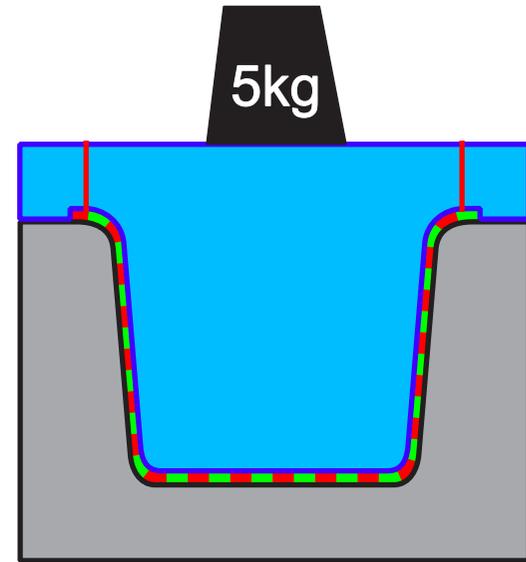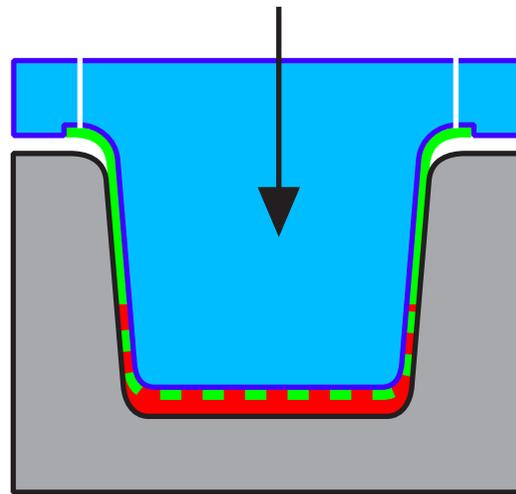

job done!